


DRILL PREP - Ø1/2" HOLES
4 PLACES - 1/4-20 X 1 FLAT HEAD,
PHILLIPS DRIVE SCREW, USE
FINISHING WASHERS PROVIDED.
** ADD Ø3/4" X 1/2" DP C'BORE
FROM FAR SIDE WHEN 1090
MATERIAL OTHER THAN
STAINLESS STEEL IS USED.

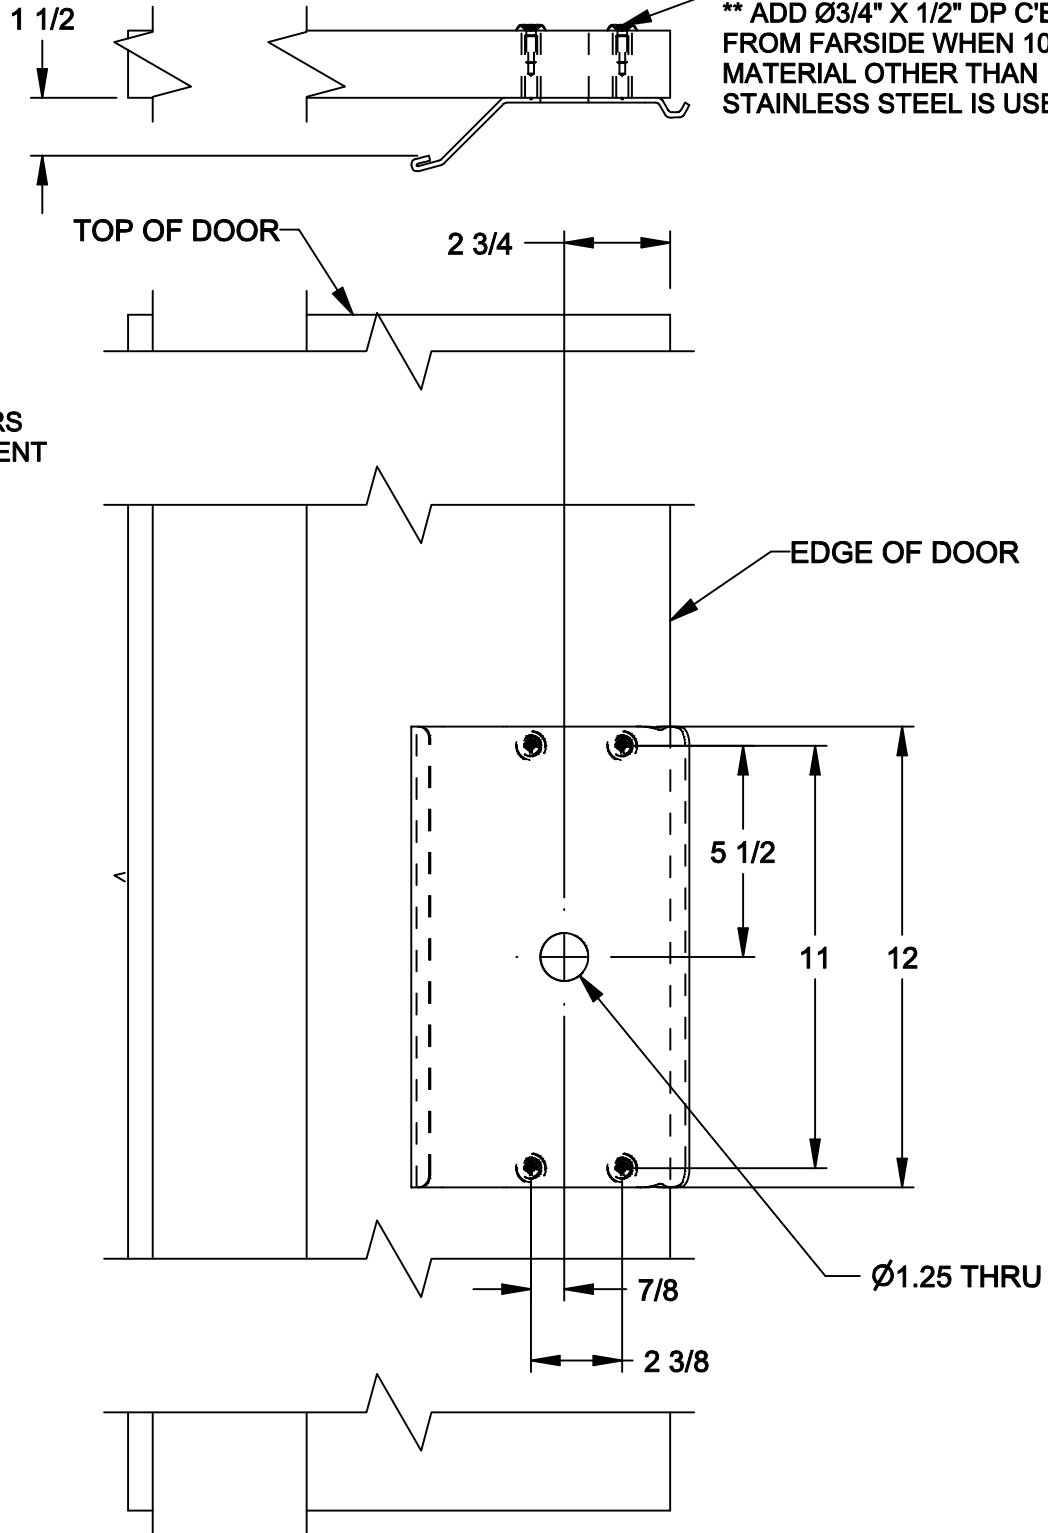

SUFFIX OPTIONS:
FC = FLUSH CYL. PREP
NC = NO CYL. PREP
RC = ROUNDED CORNERS
SP = SPECIAL ATTACHMENT
LOCATIONS.

DO NOT USE THIS TEMPLATE IF
MATING TO RIM, EXIT OR PANIC DEVICES.

PATENT NO. 354670

NOTE: This template is provided for use only on the job for which is was requested.
Trimco reserves the right to make design changes without notice. Trimco will
not be responsible for errors or damage caused by the use of out-of-date templates.

DATE

1/16/08